



[www.curtain-and-divider.com](http://www.curtain-and-divider.com)  
989-414-1209

# Installation Directions

## Stand Off Strip Curtains





# STEP 1 - INVENTORY

Before you begin, double-check that you have all the necessary components. Compare your AKON order confirmation and packing slips (if you have them) to the items you've received. Don't start the installation until you have all the parts, as shipping carriers sometimes split up shipments or items may come from different AKON warehouses. If anything is missing, contact Akon Curtains using our general contact form or by calling in.



## THESE PARTS WILL BE BOXED TOGETHER

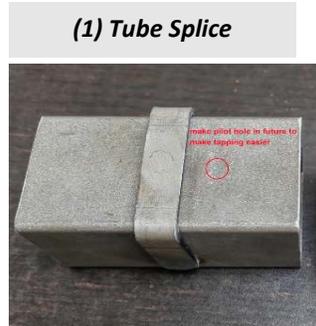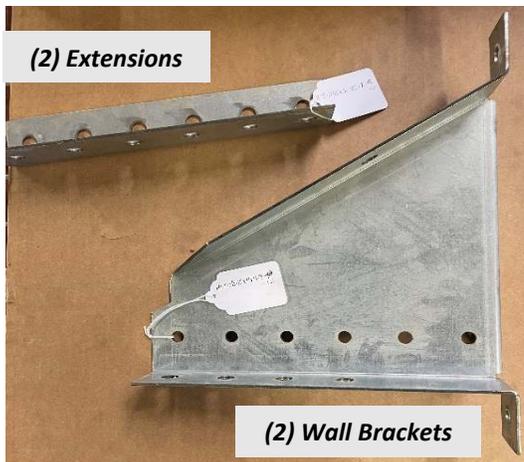

**(2) 4" x 3/8" threaded**



**(2) nuts for**



**(1) Socket for Self**



**(2) 3mm**



**(15) 3-1/2" x 3/8"**



**(15) nuts for**



**(4) Self Tapping**



**(1) 10mm**



**(15) 1-1/2" x 3/8"**



**(15) nuts for**




## THESE PARTS WILL SHIP SEPARATELY

Wall Mount | Face Mount



Strip Curtains

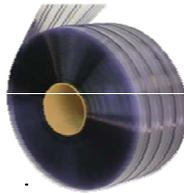


Cross Member(s)



## STEP 2 - ATTACH THE WALL MOUNTS TO THE WALL

Refer to your AKON quote and find the quoted width. Locate the center line of your door opening and mark that width on the wall. This distance represents the spacing between the wall mounts. Next, look at your quote for the quoted height of the strip curtain. This height will be measured from the floor to the bottom of the bracket. Using the provided bolts, fasteners, etc.. attach the brackets to the wall.

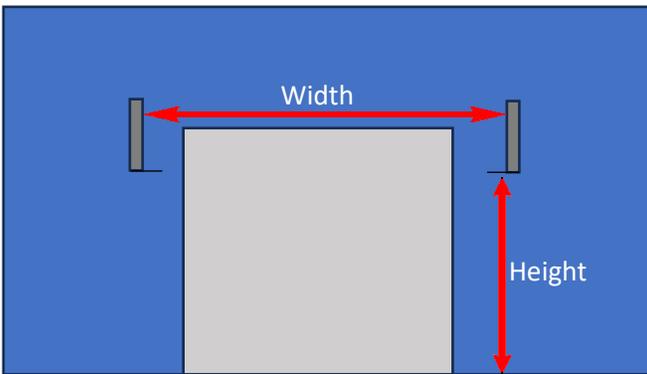

### Tip!

Take one of the strips from the strip curtain and hold it up against the door opening. Ensure that you're not mounting the brackets higher than the top of the strip curtain. It's best to leave an inch of the strip hanging down from the bottom of the brackets so you can easily trim it to size as the final step.



AKON does not provide fasteners to attach the brackets to the wall due to the wide variety of structures that customers attach to. It is the customers responsibility to ensure the structure is strong enough to hold the load and the drag created from traffic. Based on that, the customer needs to use appropriate fasteners.

### STEP 3 - ATTACH THE THE EXTENSIONS TO THE WALL MOUNTS


Determine how far out from the wall you want to extend the **crossbeam**. Once you have the ideal distance, mark the holes you will use on the right and left side **extensions**. Use the **1-1/2-inch bolts and nuts** to attach the extensions to the **wall mounts** on both sides of the door opening. Make sure to use the bottom holes, not the side holes..



*At least 2 holes from the extension must be bolted to the wall mount or serious risk of injury could occur due to the crossbeam falling off the wall brackets.*


### STEP 4 - ASSEMBLE THE CROSS BEAM

Your crossbeam might have arrived in sections, depending on your door opening width. If so, follow these instructions: Attach or slide the crossbeam sections onto the splices, drill two pilot holes using a 3mm bit, and then use a socket with your drill to install the self-tapping Tek screws. You should now have one continuous crossbeam.

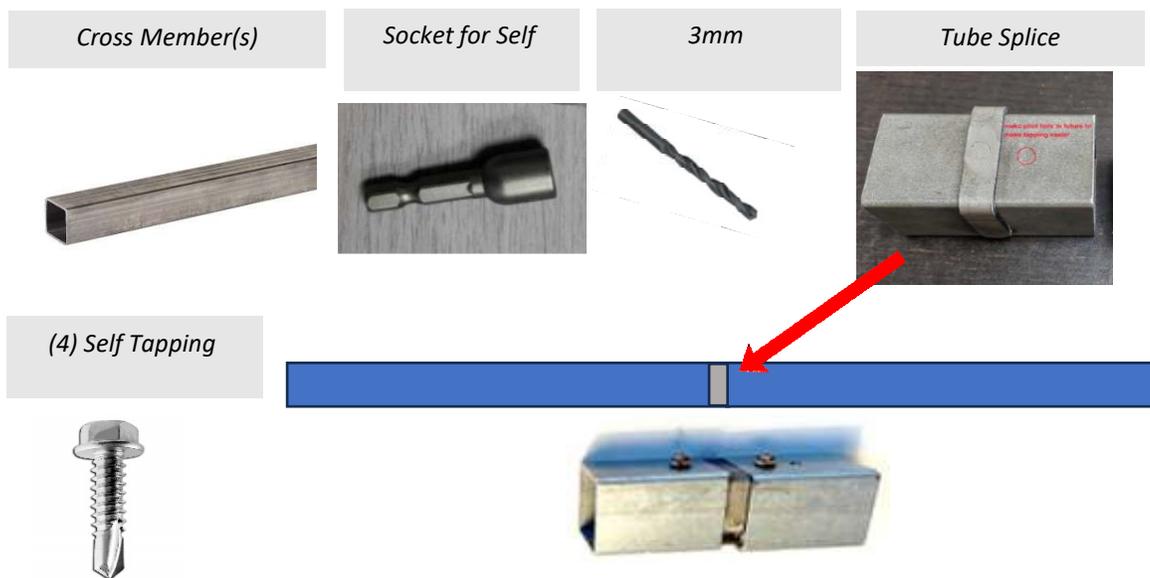

## STEP 5 - CUT THE CROSSBEAM

Your cross member might need to be shortened for a perfect fit (we ship them longer for flexibility). If so, hold it up to the extensions, mark the desired length, and then cut it using a hacksaw or sawzall.

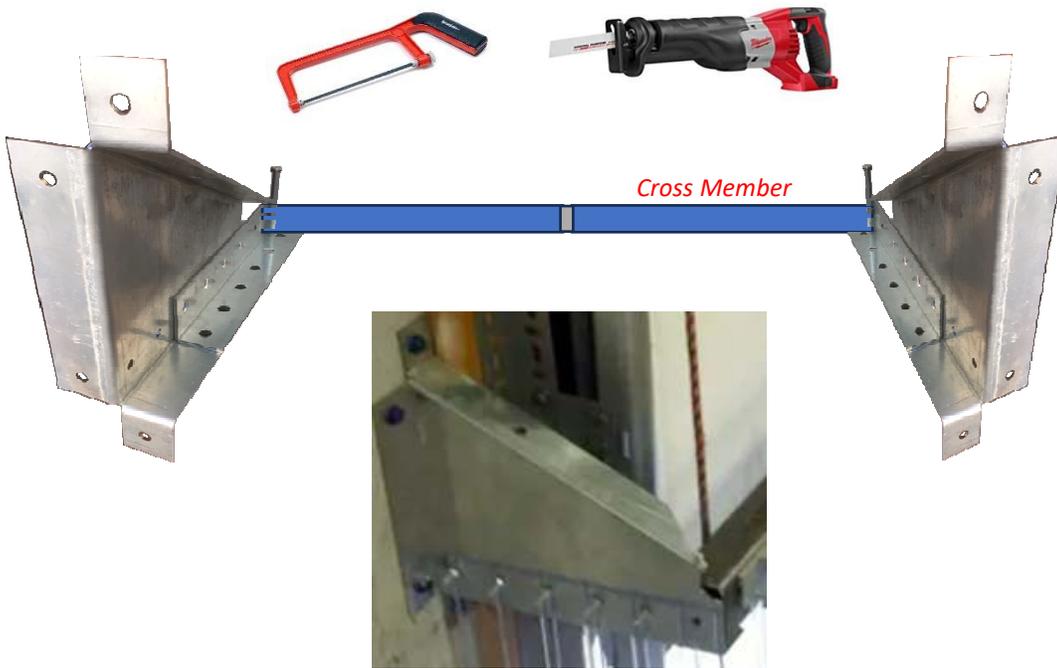

## STEP 6 - ATTACH THE CROSSBEAM TO THE EXTENSIONS

Mark the locations on the crossbeam where you'll drill two holes to attach the crossbeam to the extensions. Once you've drilled the holes, use the 4-inch bolts and nuts to secure the crossbeam to the extensions.

(2) 4" x 3/8" threaded


(2) nuts for

(1) 10mm



## STEP 7 - ATTACH THE STRIP CURTAIN STUDDED HARDWARE TO THE CROSSBEAM

You'll have sections of studded strip curtain hardware to attach to the crossbeam. The hardware has holes every 6 inches, but you only need to attach it at the ends and every 12 inches (every other hole). Drill holes in these locations on the crossbeam, then use the 3-1/2-inch bolts to secure the strip stud strips to it. Ensure the bottom of the strip hardware is flush with the bottom of the crossbeam. You might need to cut the last strip to fit perfectly.

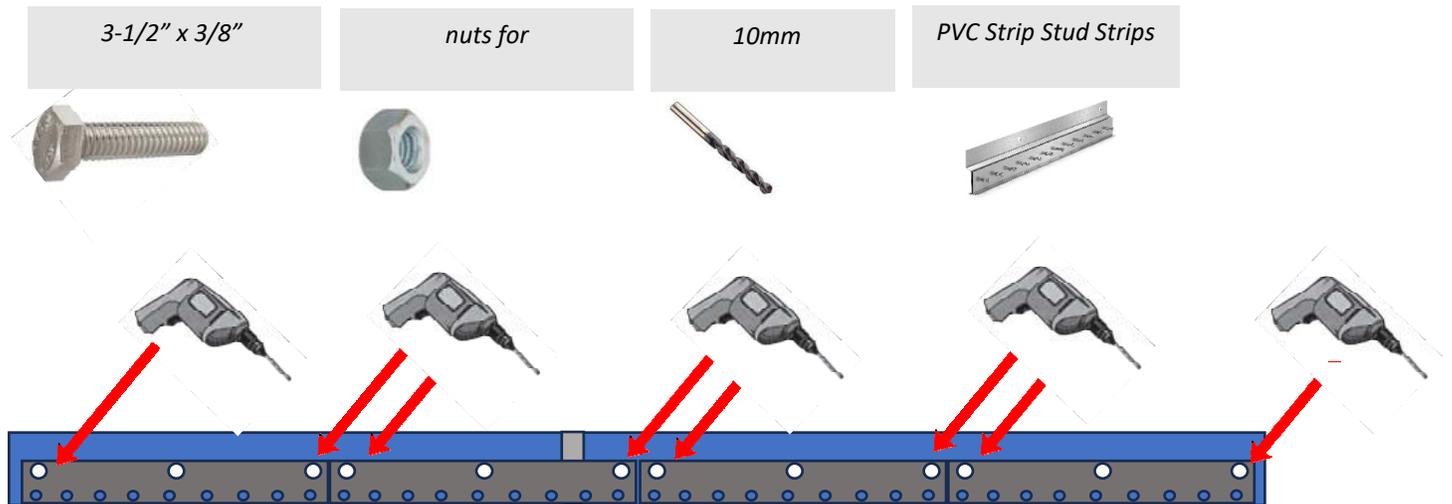

## STEP 8 - ATTACH THE STRIP CURTAIN TO THE CROSS BEAM

This step varies depending on the specific strips you ordered. Please scan the QR code for generic strip curtain installation instructions.



## STEP 9 - ATTACH STRIP(S) TO THE SIDES

Now using the bolts, attach the strip(s) to the sides to cover up the openings on the side.



3-1/2" x 3/8"



nuts for



[www.curtain-and-divider.com](http://www.curtain-and-divider.com)

989-414-1209

